INSTRUCTION MANUAL

FOR

REGULATED POWER SUPPLIES

RETURN TO
AEROSPACE DIV.

P/O # H-686813-9914
Job # 250886-00
BC # 535597

MODEL LE 103

MODEL LE 103-M

MODEL LE 103-FM

BEARING SERIAL NO. PREFIXES

A, B & C

MP MASTER
MA28328

OFFICIAL RECORDS STATION
FILE COPY
FACILITIES DEC 7 1965

LAMBDA ELECTRONICS CORP. MELVILLE, NEW YORK

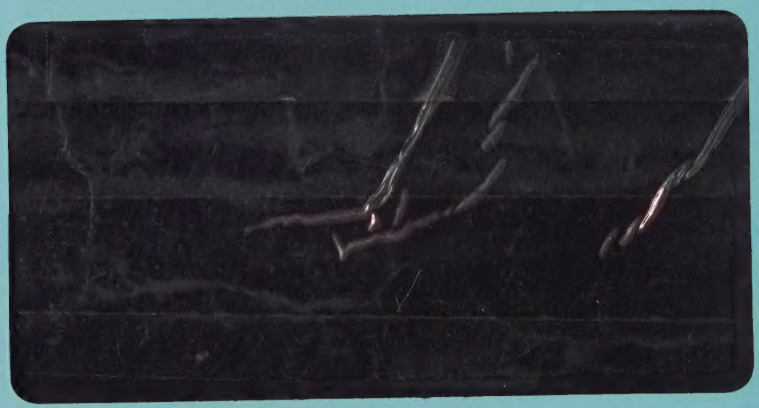

INSTRUCTION MANUAL

FOR

REGULATED POWER SUPPLIES

MODEL LE 103

MODEL LE 103-M

MODEL LE 103-FM

BEARING SERIAL NO. PREFIXES

A, B & C

This manual provides instructions intended for the operation of Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics Corp. All information contained herein applies to both metered and non-metered models unless otherwise specified.

LAMBDA ELECTRONICS CORP. MELVILLE, L. I., N. Y.
MAIN PLANT TELEPHONE: 516 MYrtle 4-4200

SPECIFICATIONS AND FEATURES

Specifications apply for the non-metered LE 103 and metered LE 103-M and LE 103-FM* models.

* For FM suffixed models specifications apply to rear output terminals only.

DC OUTPUT--Voltage regulated for line and load

Voltage Range	0-36 volts DC
Current Range	0-15 amperes, for entire voltage range

REGULATED VOLTAGE OUTPUT

Regulation (line)	Less than 0.05 percent or 8 millivolts, whichever is greater, for input variations from 105-135 or 135-105 volts AC
Regulation (load)	Less than 0.05 percent or 8 millivolts, whichever is greater, for load variations from 0 to full load or from full load to 0
Transient Response (line)	Output voltage is constant within regulation specifications for any 15-volt line voltage change within 105-135 volts AC
Transient Response (load)	Output voltage is constant within 25 millivolts for load changes from 0 to full load or full load to 0, within 50 microseconds after application
Remote Programming Constant	50 ohms/volt output, constant over entire regulated voltage range
Internal Impedance	Less than 1.3 milliohms
Ripple and Noise	Less than 0.5 millivolts rms with either positive or negative terminal grounded
Temperature Coefficient	Output change in voltage less than 0.015%/°C

DC OUTPUT--Current regulated for line and load

Current Range	1.5-15 amperes
Voltage Range	0-36 volts DC, for entire current range

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_09721

REGULATED CURRENT OUTPUT

Regulation (line).....Less than 0.2 percent or 15 milliamperes, whichever is greater, for input variations from 105-135 or 135-105 volts AC

Regulation (load).....Less than 0.2 percent or 15 milliamperes, whichever is greater, for load voltage changes from 0 to 36 or 36 to 0 volts DC

Ripple and Noise.....Less than 10 milliamperes rms with either positive or negative terminal grounded

Remote Programming.....500-ohm, 4-watt resistor adjustable over entire regulated current range

AC INPUT--105-135 volts AC at either 45-66 cps* or 320-480 cps*; 970 watts**

* Use the frequency selector switch to use power supply at either input-power frequency band

** With output loaded to full rating and input voltage 135 volts AC

OVERLOAD PROTECTION

Thermal.....Thermostat, reset by power switch; thermal overload indicator, front panel

Electrical

External.....Adjustable, automatic, electronic current-limiting circuit, settable from 10 percent to 110 percent of load; limits output current to preset limit for protection of load and power supply when external overloads and direct shorts occur

Internal.....Fuses provide protection against internal circuit failure

INPUT AND OUTPUT CONNECTIONS--Heavy duty terminal block on rear of chassis with 8-foot, 3-wire detachable line cord for all models; three, five-way binding posts provide for additional positive (+) ground and negative (-) DC output connections on front panel of FM models

OPERATING AMBIENT TEMPERATURE AND DUTY CYCLE--Continuous duty at full load from 0°C to +50°C (122°F) ambient

STORAGE TEMPERATURE- -55°C to +85°C
(non-operating)

METERS-Ruggedized voltmeter and ammeter on metered models

CONTROLS

DC output Controls.....	Coarse and fine voltage controls and current control adjust and limit DC output; located on front panel of FM models and on rear of all models
Remote Sensing.....	Provision is made for remote sensing to eliminate effect of power output lead resistance on DC regulation
Operating Mode Monitor.....	Load fault indicator illuminates when load conditions cause departure from selected mode of operation

PHYSICAL DATA

Mounting.....	Standard 19" rack mounting
Size.....	7"H x 19"W x 16-1/2"D
Weight.....	100 lbs. net; 130 lbs. shipping wt.
Panel Finish.....	Grey ripple enamel (standard); special finishes available to customer's specifications at moderate surcharge.

OPERATING INSTRUCTIONS

CONTROLS, INSTRUMENTS AND FUSES

POWER ON Switch. The POWER ON switch, located on the front panel, controls application of input power to the supply and resets the thermostat after thermal overload occurs. When the switch is in the ON position, the green POWER ON indicator glows. When THERMAL OVERLOAD indicator lights, place POWER ON switch in off (down) position to reset thermostat.

VOLTAGE CONTROLS V and ΔV. Voltage Control V, a course adjustment potentiometer, varies the DC voltage over a range of 0-35 volts and control ΔV, the fine adjustment potentiometer, varies the DC voltage over a one-volt range. Clockwise rotation results in increasing voltage. The total DC voltage output, for voltage regulated operation, is equal to the sum of V and ΔV setting; for current regulated operation the maximum voltage limit is equal to the sum of V and ΔV setting. Both controls are located on the rear deck of all units as well as on the front panel of all FM suffixed units. On the FM units, use only the front panel controls.

CURRENT CONTROL-CURRENT LIMITER Control. This potentiometer varies the DC current over a range of 1.5-16.5 amperes and, for current or voltage regulated operation, limits the DC current output to the setting on the control. Clockwise rotation results in increasing current. This control is located on the rear deck of all models as well as on the front panel of FM suffixed models. On FM models only use the front panel current control.

INPUT FREQ SWITCH. The INPUT FREQ SWITCH, with toggle locking plate, located on the rear deck of all models, permits selection of power supply operation from either of two input frequency bands; 45-66 cps or 320-480 cps. Loosen two screws to release the toggle locking plate and place toggle in required frequency band position; tighten the screws to secure the toggle in position.

MODE SELECTOR Switch and LOAD FAULT ON Indicator. The MODE SELECTOR switch permits the selection of either CURRENT REGULATED or VOLTAGE REGULATED mode of operation to be monitored by the LOAD FAULT ON indicator. When operating either mode of operation, the LOAD FAULT ON indicator will illuminate to indicate that load conditions have exceeded the preset limits for the selected mode of operation and the unit is no longer is functioning in the selected operating mode. Both indicator and switch are front-panel mounted on all models.

Thermostat and THERMAL OVERLOAD Indicator. The thermostat, located inside the rear deck, opens when the temperature of the supply exceeds a maximum safe value. Opening of the thermostat causes the red THERMAL OVERLOAD indicator on the front panel to glow. Place POWER ON switch to OFF (down) position to reset thermostat and to allow the supply to cool. When proper temperature is reached, place POWER ON switch to the ON position to restore normal operation.

OUTPUT VOLTAGE Meter. A 0-36 volt DC voltmeter monitors the voltage at the output terminals of metered units.

OUTPUT CURRENT Meter. A 0-15 ampere DC ammeter monitors the load output current of metered units.

Fuses. Fuse F1, located on the rear deck, is a 1-1/4 ampere 3AG "SLO-BLO" fuse which functions in the internal DC auxiliary circuits. Fuse F2, located on the rear deck, is a 30-ampere 3AG "SLO-BLO" fuse which functions in the AC input circuit.

Connection Terminals. Make all connections to the supply at the terminal block on the rear deck. On FM suffixed models DC output connections can also be made via three five-way binding posts located on the front panel. Apply input power through the line cord or directly to terminals 1 and 2 if the line cord is removed. Always connect the ungrounded (hot) power lead to terminal 1.

The supply positive terminal is brought out to terminal 4. The supply negative terminal is brought out to terminal 6. Recommended wiring of the power supply to the load and selection of wiring is shown in figures 1 through 11. Selection of proper wiring is made on the basis of load requirements. Make all performance checks and measurements of current or voltage at the rear output terminals. Connect measuring devices directly to terminals or use the shortest leads possible.

GROUND CONNECTIONS

The Lambda power supply can be operated either with negative or positive output terminal grounded or with terminals ungrounded. Both positive and negative ground connections are shown in the diagrams for all suggested output connections illustrated in this manual.

NOTE: When operating the supply with neither terminal grounded, high impedance leakage resistance and capacitance paths can exist between the power supply circuitry and chassis ground.

BASIC MODES OF OPERATION

This power supply is designed to operate as a constant voltage source or as a constant current source. Automatic crossover to either mode of operation occurs when load conditions change as follows:

Constant Voltage. The power supply will function as a constant voltage source while the load current does not equal the current value, I_{LIM}, set by the CURRENT CONTROL-CURRENT LIMITER control. When load current $I_L = \frac{\Delta V}{R_L}$ will cross over automatically and will operate as a constant current source. Further decrease in value of R_L results in decrease of voltage across the load while current remains limited at I_{LIM}.

Constant Current. The power supply will function as a constant current source while the load voltage V_L does not equal the voltage value set by VOLTAGE CONTROLS V and ΔV. When load voltage $V_L = V + \Delta V$, the supply will automatically cross over and operate as a constant voltage source.

SUPPLY LOAD CONNECTIONS

SAFETY NOTICE

DANGEROUS VOLTAGES EXIST IN THIS EQUIPMENT. OBSERVE THE USUAL SAFETY PRECAUTIONS WHEN OPERATING OR SERVICING THE EQUIPMENT TO AVOID SHOCK OR INJURY.

Connections for Operation as a Constant Voltage Source

The output impedance, regulation and transient response of the power supply at the load may change when using the supply as a constant voltage source and connecting leads of practical length are used. To minimize the effect of the output leads on these characteristics, remote sensing is used. Recommended types of supply load connections with local or remote sensing are described in the following paragraphs.

Refer to figures 1 and 2 to determine voltage drop for particular cable length, wire size and current conditions. Lead lengths must be measured from supply terminals to load terminals as shown in figure 3.

Two-Wire Connection, Figure 4. The two-wire connection, with local sensing, is the connection suitable for application with relatively constant load where excessive drops from load regulation and fast transient response over full-rated current excursion are not required at the load.

Improved Two-Wire Connection, Figure 5. The improved two-wire connection, with remote sensing, is suitable for applications where essentially constant current loads are used. Using multiple paralleled leads in this type of connection reduces the supply-load lead voltage drop and permits improved regulation and transient response.

Four-Wire Connection, Figure 6. The four-wire connection with remote sensing, provides complete compensation for the DC voltage drops in the connecting cables. Compensation for load drop is also valid for gradual change of load current.

Programmed Voltage Connections, Figures 7 and 8. Discrete voltage steps can be programmed with a resistance voltage divider network at 50 ohms/volt output and a shorting-type switch as shown in figure 7. When continuous voltage variations are required, use a variable resistor with the same 50 ohms/volt ratio in place of the resistive voltage divider and shorting-type switch. Use a low temperature coefficient resistor to assure most stable operation.

As shown in figures 7 and 8, voltages can be programmed utilizing either local or remote sensing connections, as desired. In addition, figures 10 and 11 illustrate how the Lambda power supply can be connected to provide programmed voltage with local or remote sensing, together with programmed current.

Connections for Operation as a Constant Current Source

Figure 4 shows the connections which are used when operating the power supply as a constant current source with local setting of current control.

Programmed Current Connections, Figure 9. To provide discrete current steps from 10% to 110% of rated current, use any combination of appropriate 2-watt resistors totaling 200 ohms together with a shorting-type switch connected as shown in figure 9. Use resistors with low temperature coefficients to assure most stable operation.

When continuous current variations are required, use a 500 ohm 2-watt variable resistor in place of the fixed resistors and shorting-type switch.

As shown in figures 10 and 11, Lambda power supplies can be connected to provide programmed current together with programmed voltage.

OPERATING PROCEDURES

CAUTION

For all FM model power supplies, when performing steps of operating procedure that require adjusting the VOLTAGE CONTROLS V and ΔV knobs and the CURRENT CONTROL-CURRENT LIMITER knob, only adjust the front-panel mounted voltage and current controls. Rear-deck mounted controls for all FM models must remain locked in the full CCW position and must never be disturbed.

SAFETY NOTICE

DANGEROUS VOLTAGES EXIST IN THIS EQUIPMENT. OBSERVE THE USUAL SAFETY PRECAUTIONS WHEN OPERATING OR SERVICING THE EQUIPMENT TO AVOID SHOCK OR INJURY.

Constant Voltage Operation, Adjustable Current Limit

1. Remove AC power input to the supply and place POWER ON switch in down position before connecting load to the supply.

2. Determine load requirements, select wire size from figures 1-3 and choose correct type of supply-load connections from figures 4-6.

3. Connect supply to load as shown on the selected connection diagram.

NOTE: When shipped from the factory, the supply is ready for use as a constant current source or as a local-sensing constant voltage source. Jumpers are connected at the factory as shown in figure 4. Take care to remove the appropriate jumpers for load requirements that need different supply-load connections. Refer to the appropriate connection diagram.

4. Turn VOLTAGE CONTROLS V and △V knobs to the desired voltage setting. See CAUTION on page 7.

5. When current to the load must be limited to an intermediate value within the current limit rating of the supply, turn the CURRENT CONTROL-CURRENT LIMITER control to the desired current limit setting. If no intermediate current limit is required, turn the control to the full CW position to obtain current limit at maximum current limit rating of the supply. See CAUTION on page 7.

6. Apply AC power to the supply. Place INPUT FREQ SWITCH in appropriate position and lock in position.

7. Place INDICATOR SELECTOR switch in VOLTAGE REGULATED position.

8. Place POWER ON switch in up position and check that green POWER ON indicator is lit, and that red LOAD FAULT ON indicator is not lit.

9. Check that OUTPUT CURRENT and OUTPUT VOLTAGE meters indicate desired values; if required, adjust VOLTAGE CONTROLS V and △V and CURRENT LIMITER control to obtain current meter indications. For non-automatic models use external connected meters and check that correct meter indications exist at output terminals 4 and 6.

10. Check that red THERMAL OVERLOAD indicator is not lit. Power supply is now in proper operation.

Programmed Constant Voltage Operation, Adjustable Current Limit

1. Remove AC power input to the supply and place POWER ON switch in down position before connecting load to the supply.

2. Determine load requirements, select wire size and length from figures 1, 2 and 3 and choose correct type of supply-load connections from figures 7 and 8 or 10 and 11. Refer to paragraph on Programmed Voltage Connections.

3. Connect supply to load as shown on the selected connection diagram. Take care to use a shorting-type switch for the external programming control when several voltages are desired.

4. Turn VOLTAGE CONTROLS V and △V knobs to the extreme CCW position. Adjust external programmed voltage control to desired voltage setting. See CAUTION on page 7.

5. When current to the load must be limited to an intermediate value within the current limit rating of the supply, turn the CURRENT CONTROL-CURRENT LIMITER knob to the desired current limit setting. If no intermediate current limit is desired, turn the control to the full CW position to obtain current limit at the maximum current limit rating of the supply. See CAUTION on page 7.

6. Apply AC power to the supply. Place INPUT FREQ SWITCH in appropriate position and lock in position.

7. Place INDICATOR SELECTOR switch in VOLTAGE REGULATED position.

8. Place POWER ON switch in up position and check that green POWER ON indicator is lit and that red LOAD FAULT ON indicator is not lit.

9. Check that OUTPUT CURRENT and OUTPUT VOLTAGE meters indicate desired values; as required, adjust CURRENT LIMITER knob and external programming voltage applied to obtain correct meter indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 4 and 6.

10. Check that red THERMAL OVERLOAD indicator is not lit. Power supply is now operating properly.

Constant Current Operation, Adjustable Voltage Limit

1. Remove AC power input to the supply and place POWER ON switch in down position before connecting load to the supply.

2. Determine load requirements and connect load to the supply as shown in figure 4.

3. Turn the CURRENT CONTROL-CURRENT LIMITER knob to the desired current setting. See CAUTION on page 7.

4. When load voltage must be limited to an intermediate value within the voltage rating of the supply, turn VOLTAGE CONTROLS V and ΔV to the desired voltage limit setting. If no intermediate voltage limit, within rating of supply is desired, turn V and ΔV controls to the full CW position for desired voltage limit at maximum voltage rating of the supply. See CAUTION on page 7.

5. Apply AC power to the supply. Place INPUT FREQ SWITCH in appropriate position and lock in position.

6. Place INDICATOR SELECTOR switch in CURRENT REGULATED position.

7. Place POWER ON switch in up position and check that green POWER ON indicator is lit and that red LOAD FAULT ON indicator is not lit.

8. Check that OUTPUT CURRENT and OUTPUT VOLTAGE meters indicate desired values; adjust V and ΔV voltage controls and CURRENT LIMITER control as required to obtain correct indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 4 and 6.

9. Check that red THERMAL OVERLOAD indicator is not lit. Power supply is now in proper operation.

1. Remove AC power input to the supply and place POWER ON switch in off (down) position before connecting load to the supply.

2. Determine load requirements and choose correct type of supply-load connection from figures 9, 10 and 11. Refer to paragraph on Programmed Current Connections.

3. Connect supply to load as shown on the selected connection diagram.

4. Turn the CURRENT CONTROL-CURRENT LIMITER knob to the extreme CCW position. Adjust external programmed current control to desired current setting. See CAUTION on page 7.

5. When load voltage must be limited to an intermediate value within the voltage rating of the supply, turn VOLTAGE CONTROLS V and ΔV to the desired limit setting. If no intermediate voltage limit, within the rating of the supply, is desired turn the V and ΔV controls to the full CW position to obtain voltage limit at maximum voltage rating of the supply. See CAUTION on page 7.

6. Apply AC power to the supply. Place INPUT FREQ SWITCH in appropriate position and lock in position.

7. Place INDICATOR SELECTOR switch in CURRENT REGULATED position.

8. Place POWER ON switch in ON (up) position and check that green POWER ON indicator is lit and that red LOAD FAULT ON indicator is not lit.

9. Check that OUTPUT CURRENT and OUTPUT VOLTAGE meters indicate desired values; as required, adjust external programmed current control and V and ΔV voltage controls to obtain correct indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 4 and 6.

10. Check that red THERMAL OVERLOAD indicator is not lit. Power supply is now in proper operation.

OPERATION AFTER PROTECTIVE DEVICE SHUTDOWN

Thermostat Shutdown

The thermostat opens the input circuit only when the temperature of the rear deck exceeds a maximum safe value. Place the POWER ON switch in the off (down) position to reset the thermostat. After eliminating the cause(s) for overheating and allowing time for the power supply to cool to a proper temperature, resume operation of the supply. Refer to appropriate paragraph in OPERATING PROCEDURES.

nal component failure is prevented by fuses which protect the components from damage caused by excessive currents. will blow when the maximum rated current value for the fuse is exceeded. Fatigue failure of fuses can occur when mechanical vibrations from the installation combine with thermally induced stresses to weaken the fuse metal. Many fuse failures are caused by a temporary condition, and replacing the blown fuse will make the fuse protected circuit operative.

SERIES OPERATION

For series operation, a maximum of 200 volts can be connected between either the +DC or -DC terminal and chassis ground. When operating two (2) or more power supplies, of equal or unequal ratins, in series, clamping diodes of suitable rating must be used across each of the power supplies to prevent reverse voltage from appearing across the power supplies during turn-on, turn-off, and certain fault conditions. This reverse voltage can appear under certain operating conditions and cause damage to the electrolytic output capacitors. Contact the nearest office of the Lambda Electronics Corp. for recommended diode rating suitable for specific series operation.

ADJUSTMENT OF CALIBRATION CONTROLS

Adjust Calibration Control R4 as Follows:

1. Operate the power supply for constant voltage, with internal-sensing (see schematic diagram) as shown in Figure 5, and at external load.

2. Turn VOLTAGE CONTROLS V (R2) to 35-volt position and ΔV (R1) to 5-volt position.

3. Adjust R4 for 36 volts DC output, using a DC voltmeter of one percent accuracy or better. Turn the shaft firmly to break the glyptal thread-seal.

4. Apply several drops of glyptal to the threads of the potentiometer shaft to lock the shaft in position after adjustment is completed.

Adjust Calibration Control R16 as Follows:

1. Operate the power supply for constant current, with short circuit across output terminals.

2. Turn CURRENT CONTROL-CURRENT LIMITER control (R16) to the 15.0 ampere position.

3. Adjust R16 for 15.0 ampere DC output, using any DC ammeter of one percent accuracy or better. Turn the shaft firmly to break the glyptal thread-seal.

4. Apply several drops of glyptal to the threads of the potentiometer shaft to lock the shaft in position after adjustment is completed.

Adjust Calibration Control R49 as Follows:

1. Operate the power supply under the following conditions:

   a. Input: 135 volts at 60 cps.
   b. Mode: Constant voltage at full load, with local sensing. (see figure 4.)
   c. Output: 36 volts DC at 15 amperes.
   d. Temperature: 25°C ambient, approximately. Use a fan to apply forced air cooling to the coarse regulator (Q13 component board)

2. Using a DC VTVM, John Fluke Model 801H or equivalent, connect VTVM across collector and emitter of transistor Q19.

3. Adjust calibration control R49 until voltmeter indicates 6.1 volts. Turn the shaft firmly to break the glyptal thread-seal.

4. Apply several drops of glyptal to the threads of the potentiometer shaft to lock the shaft in position, after adjustment is completed.

PERFORMANCE CHECKS

Checks With Constant Voltage Operation

Check the ripple or regulation of the power supply using the test connection diagram shown in figure 12. Use suggested test equipment or equivalent to obtain accurate results. Refer to SPECIFICATIONS AND FEATURES for minimum performance standards.

Set the differential meter, DC VTVM (John Fluke Model 801H or equivalent) to the selected power supply operating voltage. Check the power supply load regulation accuracy while switching from the load to the no-load condition. Long load leads should be a twisted pair to minimize AC pick-up.

Use a Variac to vary the line voltage from 105-135 or 135-105 volts AC and check the power supply line regulation accuracy on the VTVM differential meter.

Use a VTVM, Ballantine 320 or equivalent, to measure rms ripple voltage of the power supply DC output.

Checks With Constant Current Operation

Check the ripple or regulation of the power supply using the test connection diagram shown in figure 13. Refer to SPECIFICATIONS AND FEATURES for minimum performance standards.

Check the power supply load regulation accuracy while switching from the short circuit to load condition. Measure the voltage across sensing resistor Rs. Use John Fluke Model [illegible] or equivalent for the VTVM connected across [illegible], use a 0.01-ohm, 5%-wire resistor. To obtain regulation figure, substitute values obtained into regulation formula:

$$\frac{\Delta E}{Rs} = \text{Regulation in milliamperes,}$$

where ΔE is the voltage change in millivolts and Rs is the resistance of the sensing resistor.

Use a Variac to vary the line voltage from 105-135 or [illegible] volts AC and check the power supply line regulation accuracy using VTVM and the regulation formula $\frac{\Delta E}{Rs}$.

To measure the ripple current of the power supply be tested, use a Ballantine Model 320 or equivalent meter and obtain ripple current I_r by substituting measured value into formula:

$$\frac{\text{V A.C. rms}}{Rs} = I_r$$

SERVICE

When additional instructions are required or repair service is desired, contact the nearest office of the Lambda Electronics Corp. where trained service personnel and complete facilities are ready to assist you.

Please include the power supply model and serial number together with complete details of the problem. On receipt of this information, Lambda will issue a return authorization for factory repair service.

All repairs not covered by the warranty will be billed at cost and an estimate forwarded for approval before work is started.

PARTS ORDERING

Standard components and special components used in the Lambda power supply can be obtained from the factory. In case of emergency, critical spare parts are available through any Lambda office.

The following information is required when ordering parts:

1. Model number and serial number of power supply and purchase date.

2. Lambda part number.

3. Description of part together with circuit designation.

4. If part is not an electronic part, or is not listed, provide a description, function, and location of the parts.

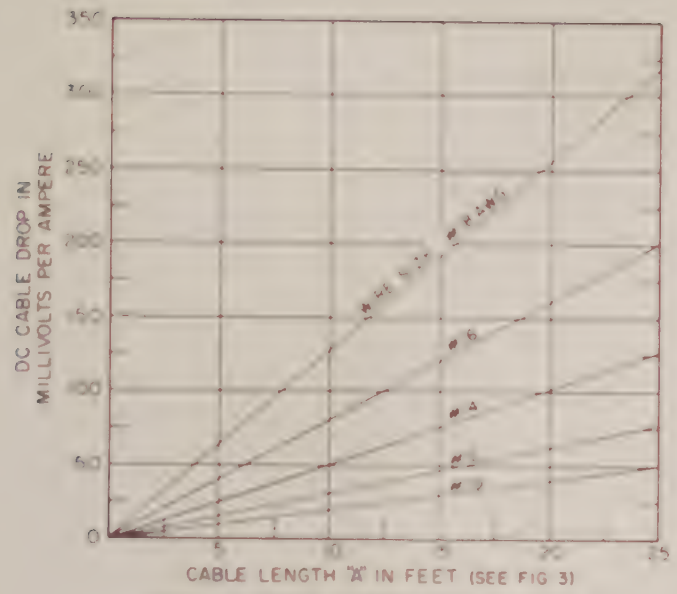

FIG 1 2-WIRE CONNECTION (SEE FIG 4)

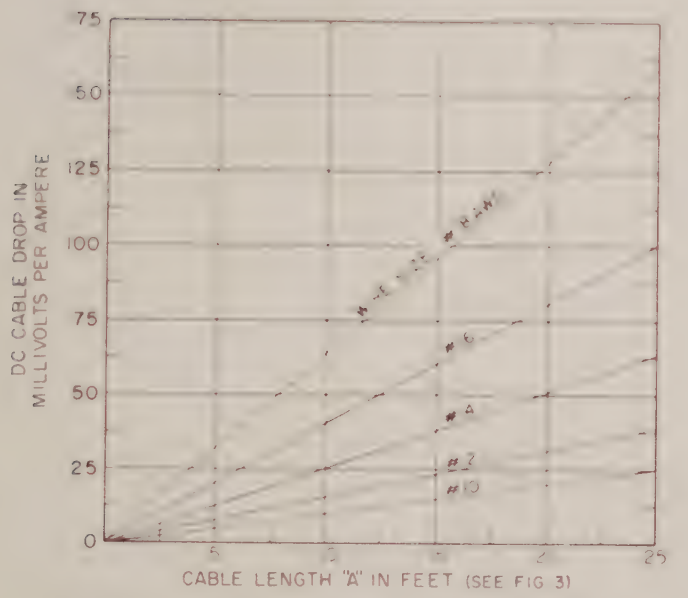

FIG. 2. IMPROVED 2-WIRE CONNECTION (SEE FIG.5)

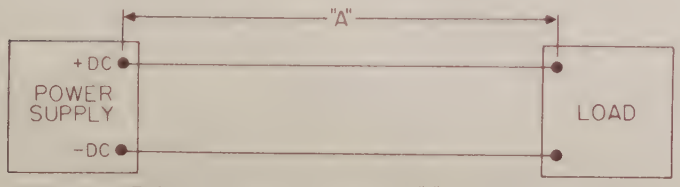

FIG. 3. CABLE LENGTH "A" IN FEET

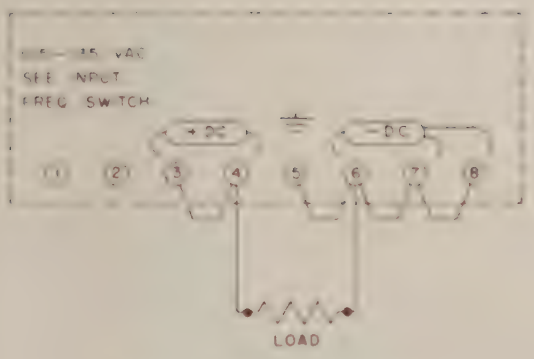

(a)

NEGATIVE TERMINAL GROUNDED

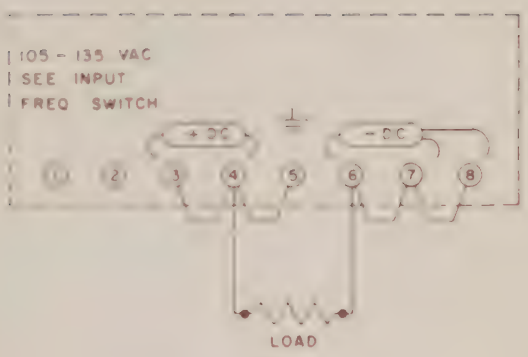

(b)

POSITIVE TERMINAL GROUNDED

FIG 4 TWO – WIRE CONNECTION

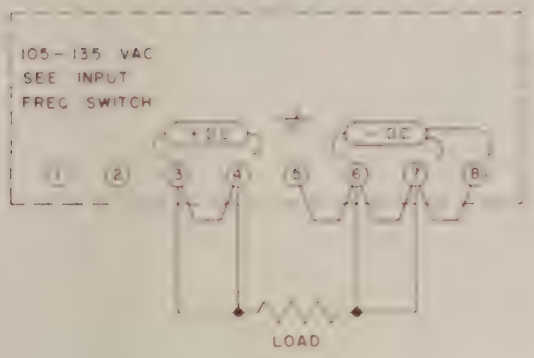

(a)

NEGATIVE TERMINAL GROUNDED

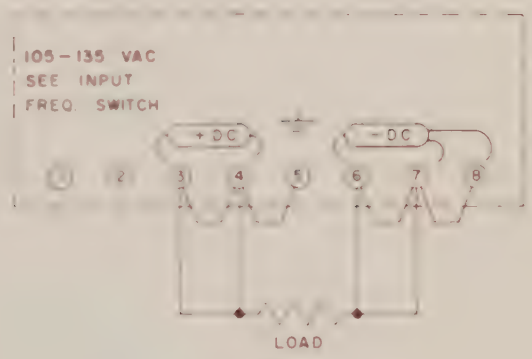

(b)

POSITIVE TERMINAL GROUNDED

FIG 5. IMPROVED TWO – WIRE CONNECTION

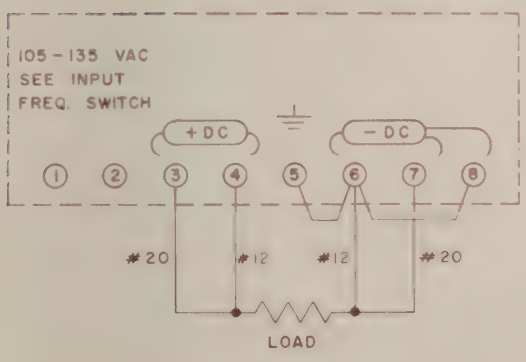

(a)

NEGATIVE TERMINAL GROUNDED

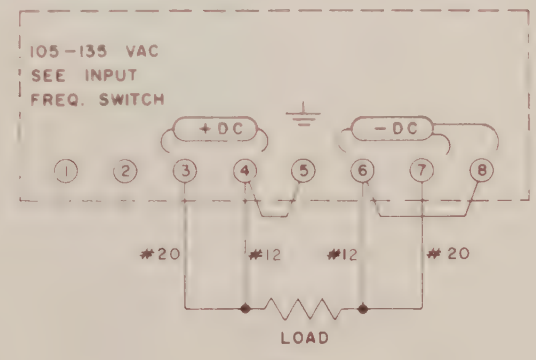

(b)

POSITIVE TERMINAL GROUNDED

FIG. 6. FOUR – WIRE CONNECTION

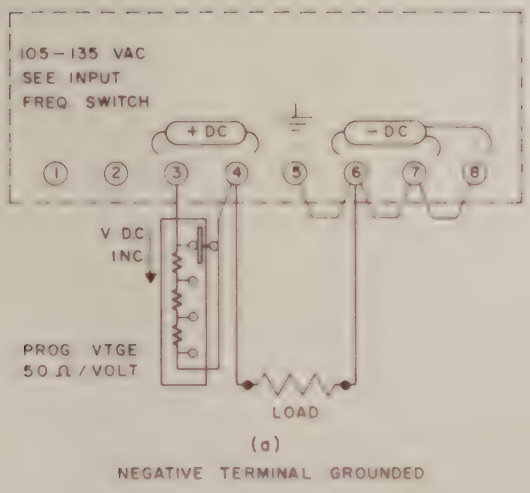

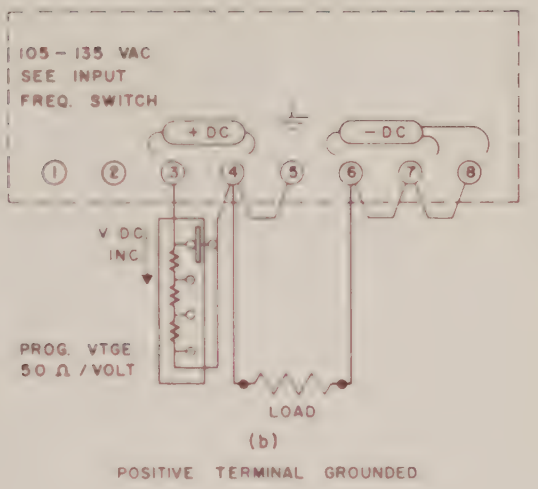

FIG. 7. PROGRAMMED VOLTAGE, LOCAL SENSING

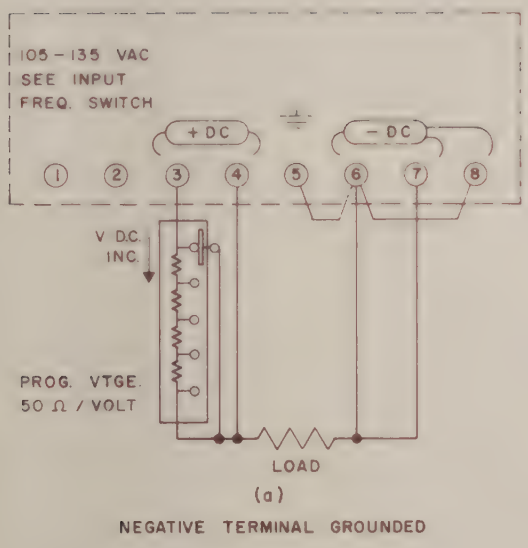

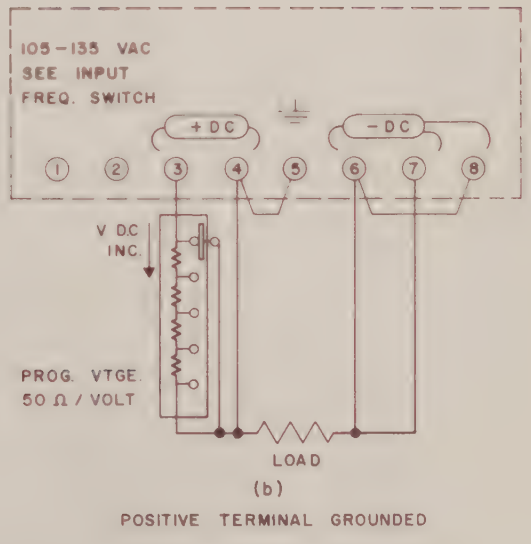

FIG. 8. PROGRAMMED VOLTAGE, REMOTE SENSING

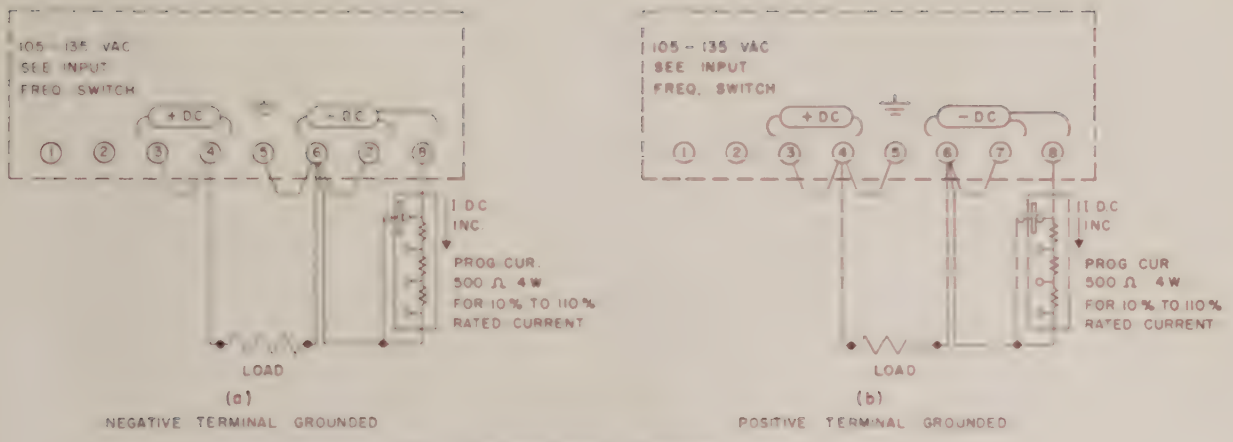

FIG 9. PROGRAMMED CURRENT

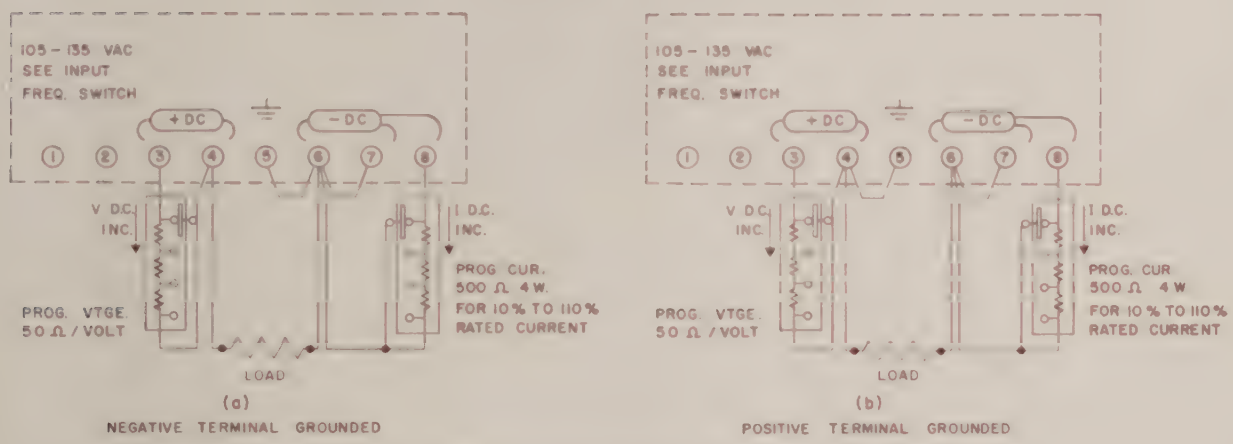

FIG. 10. PROGRAMMED VOLTAGE, LOCAL SENSING & PROGRAMMED CURRENT

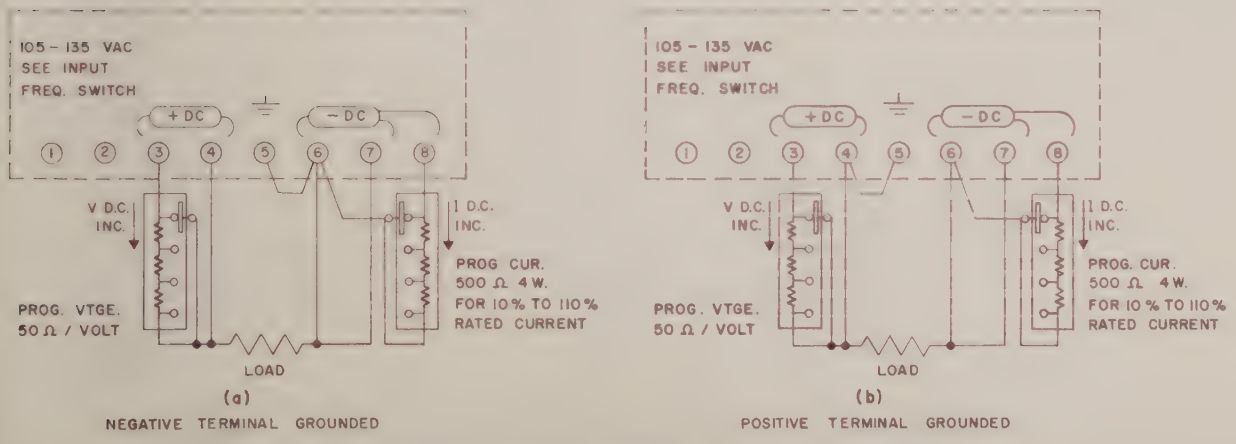

FIG. 11. PROGRAMMED VOLTAGE, REMOTE SENSING & PROGRAMMED CURRENT

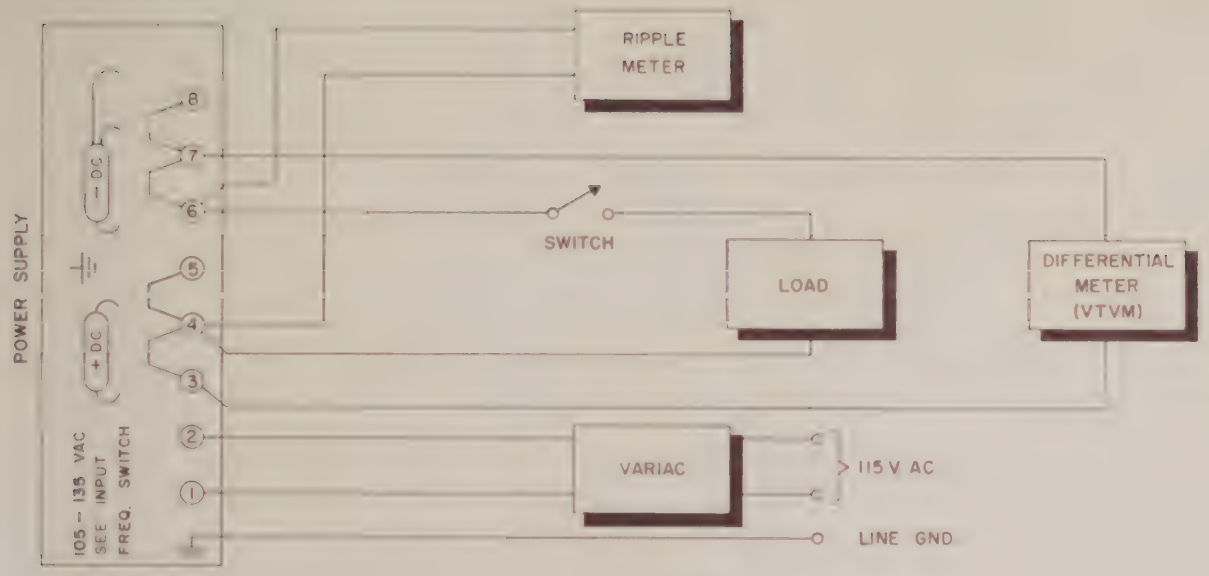

NOTES

1. REGULATION AND RIPPLE CHECK METERS MUST NOT BE GROUNDED THROUGH THREE-WIRE LINE CORD TO GROUND
2. PERFORM CHECKS WITH LOCAL SENSING CONNECTIONS ONLY

FIG. 12. TEST CONNECTIONS FOR CONSTANT VOLTAGE PERFORMANCE CHECKS

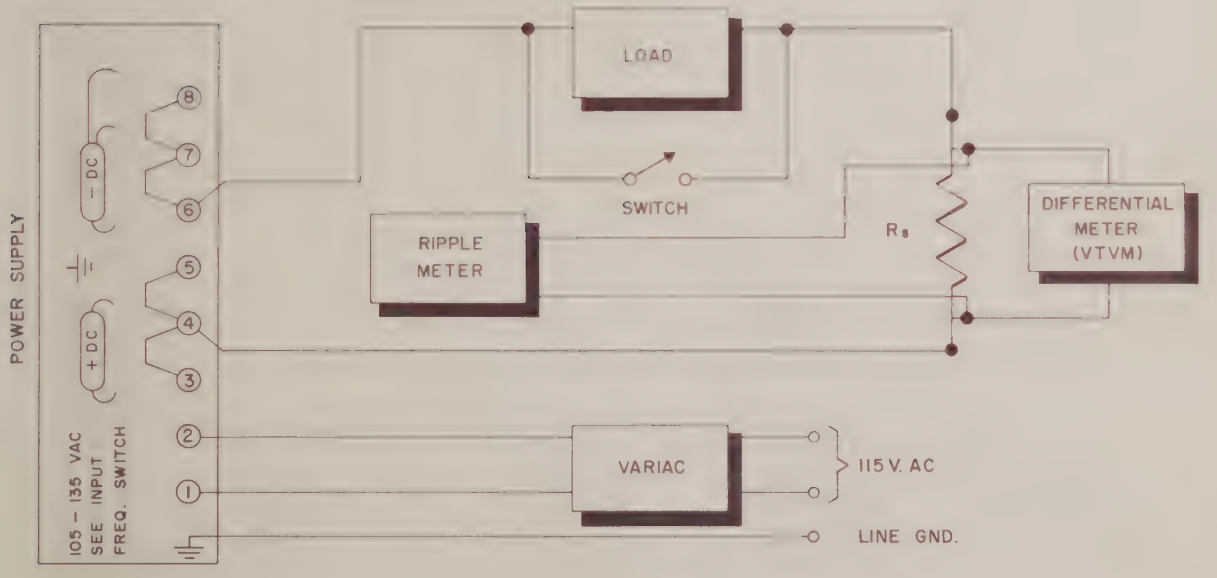

NOTES:

1. REGULATION AND RIPPLE CHECK METERS MUST NOT BE GROUNDED THROUGH THREE-WIRE LINE CORD TO GROUND.
2. PERFORM CHECKS WITH LOCAL SENSING CONNECTIONS ONLY.

FIG. 13. TEST CONNECTIONS FOR CONSTANT CURRENT PERFORMANCE CHECKS

NOTES

1. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED
2. [illegible] WATTAGE 1/2 WATT RESISTORS ABOVE 2 WATTS A[illegible] UNLESS OTHERWISE NOTED
3. RESISTOR TOLERANCES COMPOSITION, ±10%, WIREWOUND, ±5 UNLESS OTHERWISE NOTED
4. CAPACITOR TOLERANCES ELECTROLYTIC, -10% +100%, TA PAPER, ±10%, MICA, ±20% UNLESS OTHERWISE NOTED
5. SYMBOLS

   INDICATES CLOCKWISE ROTATION OF SHAFT

   INDICATES CONNECTION TO CHASSIS

   INDICATES ADJUSTMENT OR CALIBRATION CONTROL

   INDICATES ACTUAL UNIT MARKING

   INDICATES FRONT-PANEL MOUNTED COMPONENT

   INDICATES FACTORY ADJUSTMENT, SEE INSTRUCTIO

   INDICATES TRANSFORMER HEADER TERMINAL

   THIS DIODE IS LAMBDA PART NO FBL-00-030, C WITH STANDARD TYPE 1N645 DIODE UNLESS OTH
6. CONDITIONS FOR CIRCUIT POINT VOLTAGE MEASUREMENTS

   A CONSTANT VOLTAGE

   READ ITALICIZED NUMBERS FOR CIRCUIT POINT IN CONSTANT VOLTAGE OPERATION

   INPUT 120 VAC 60 CPS

   OUTPUT 36 VOLTS, OUTPUT CURRENT ZERO

   B CONSTANT CURRENT

   READ NUMBERS IN PARENTHESES FOR CIRCUIT [illegible] WHILE IN CONSTANT CURRENT OPERATION

   INPUT 120 VAC 60 CPS

   OUTPUT 0 VOLTS, OUTPUT CURRENT 1.5 AMPS (SH

   INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE [illegible] OTHERWISE NOTED

   DC MEASUREMENTS TAKEN WITH 20,000 OHMS/VOLT BETWEEN -DC (TERM 6) AND INDICATED POINTS UNLESS
7. THIS DIODE IS LAMBDA PART NO FBL-00-029, CAN WITH STANDARD TYPE 1N2154 DIODE
8. DESIGNATIONS ARE LAMBDA PART NUMBERS
9. T3 CONTAINED IN SAME ENCLOSURE AS T1

   CR33 & CR35 ARE MATCHED PAIR, LAMBDA PART NO

   THIS INPUT CIRCUIT CONNECTION IS FACTORY INSTALL APPLICABLE TO MODELS DESIGNED FOR OPERATION WITH
10. ALL FUSES ARE TYPE 3AG "SLO BLO"
11. R17 WAS 220 OHMS, R17 WAS CONNECTED TO BASE OF ON UNITS BEARING SERIAL NO PREFIX A
12. FIG A HEADER CONFIGURATION ONLY USED ON UNIT PREFIXES A & B, SEE FIG B

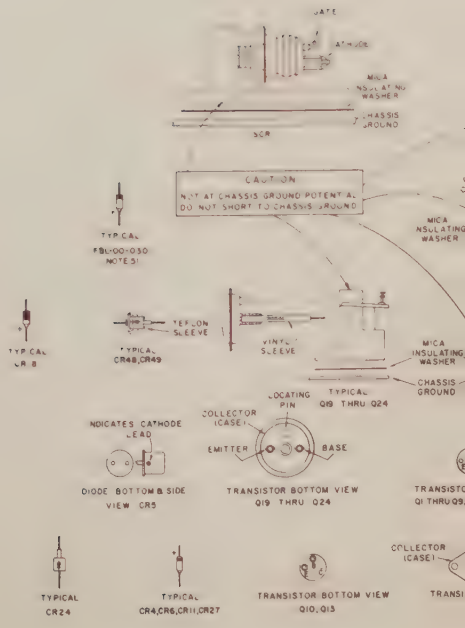

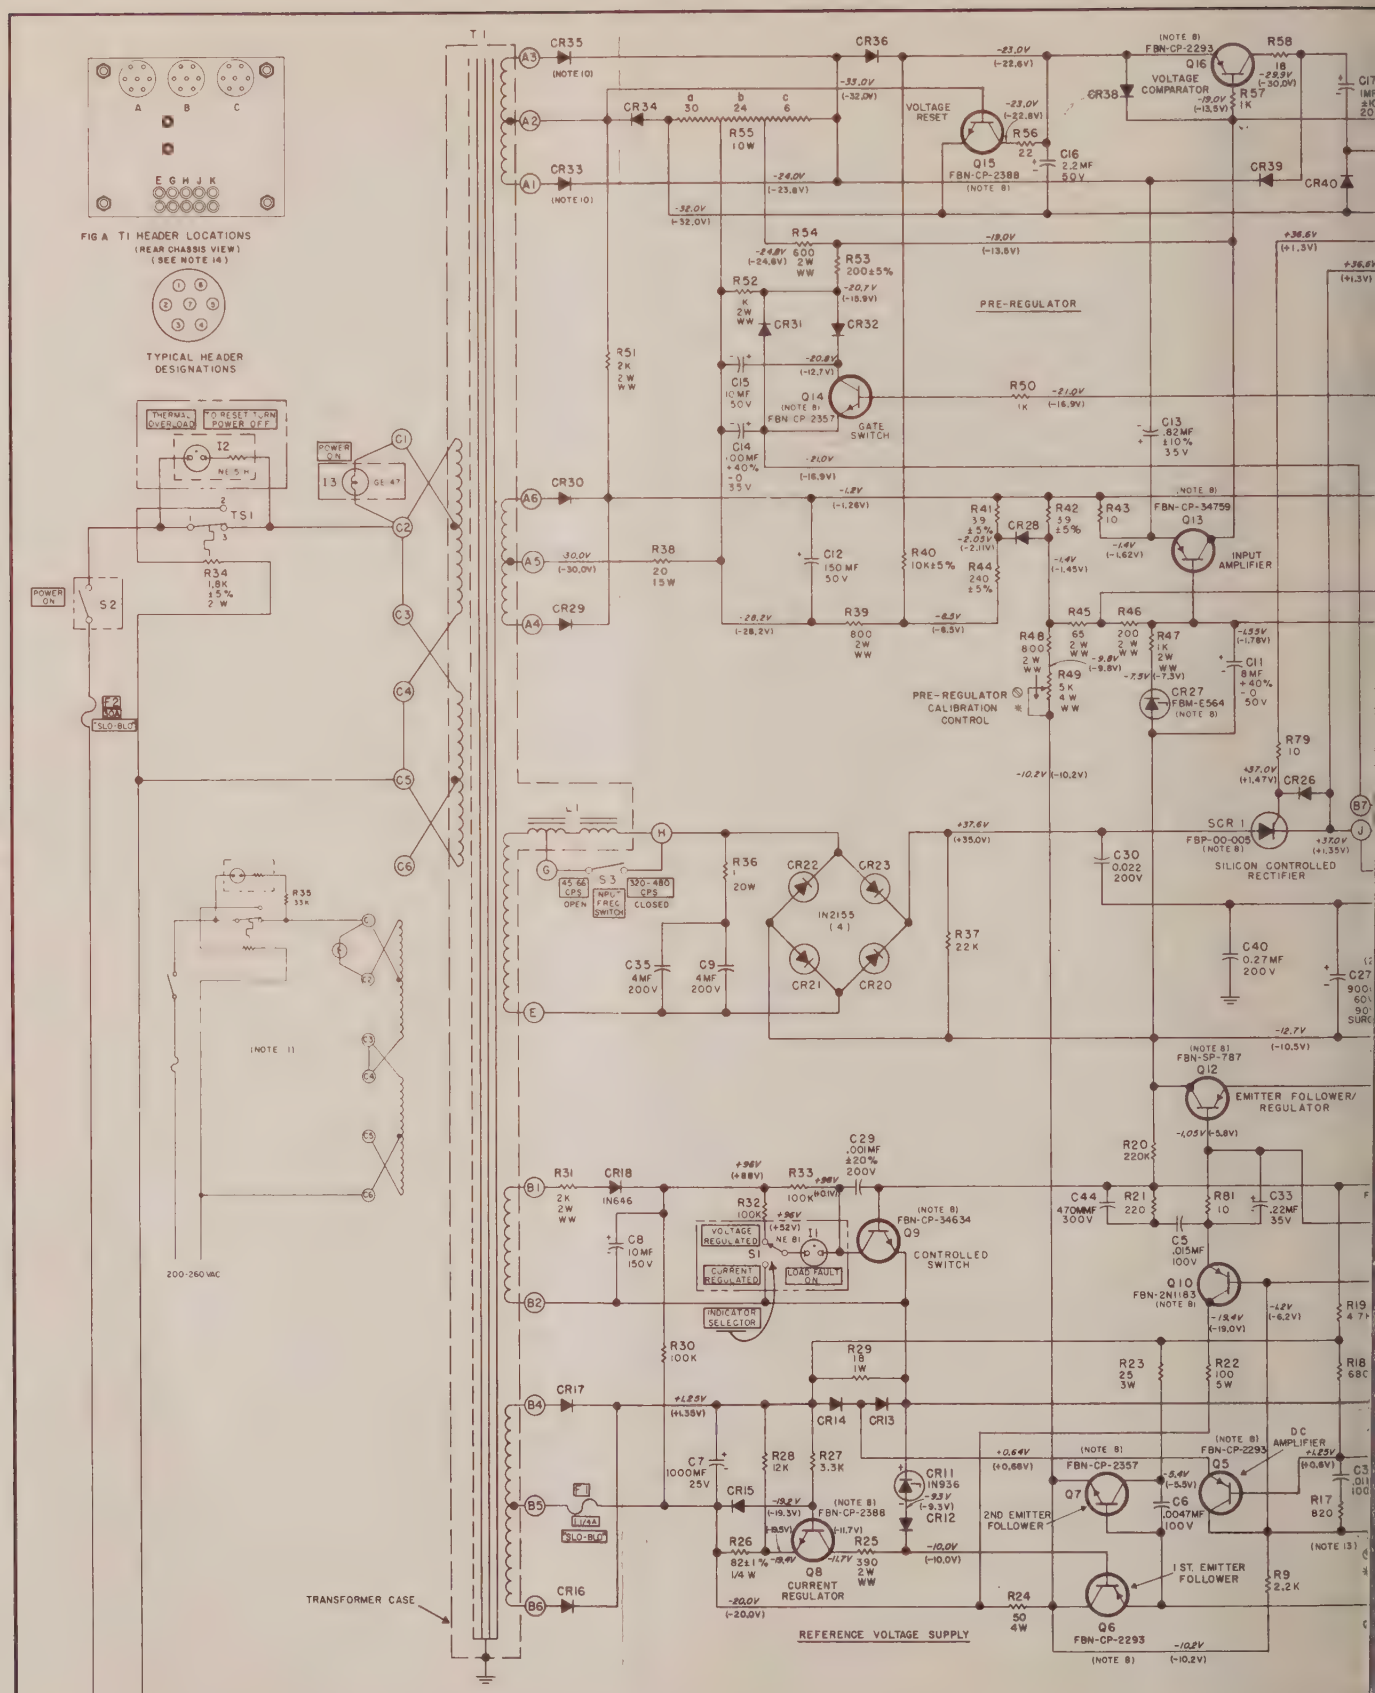
T1
A B C
E G H J K
FIG A T1 HEADER LOCATIONS
(REAR CHASSIS VIEW)
(SEE NOTE 14)
TYPICAL HEADER DESIGNATIONS
THERMAL OVERLOAD
TO RESET TURN POWER OFF
I2
NE 51 H
I3
GE 47
POWER ON
S2
TS1
R34 1.8K ±5% 2W
F2 1/4A SLO-BLO
C1
C2
C3
C4
C5
C6
R35 33K
NOTE 11
200-260 VAC
TRANSFORMER CASE
CR35
CR36
CR34
CR33
R55 10W
VOLTAGE RESET
Q15 FBN-CP-2388
C16 2.2MF 50V
CR38
CR39
CR40
Q16 VOLTAGE COMPARATOR
FBN-CP-2293
R58
R57 1K
R54 600 2W WW
R53 200±5%
R52 K 2W WW
CR31
CR32
PRE-REGULATOR
R51 2K 2W WW
C15 10 MF 50V
C14 .100MF +40% -0 35V
Q14 FBN-CP-2357
GATE SWITCH
R50 1K
C13 .82MF ±10% 35V
CR30
CR29
R38 20 15W
C12 150 MF 50V
R40 10K±5%
R41 39 ±5%
R42 39 ±5%
R43 10
CR28
Q13 FBN-CP-34759
INPUT AMPLIFIER
R39 800 2W WW
R44 240 ±5%
R45 65 2W WW
R46 200 2W WW
R47 1K 2W WW
R48 800 2W WW
R49 5K 4W WW
PRE-REGULATOR CALIBRATION CONTROL
C11 8MF +40% -0 50V
CR27 FBM-E564
R79 10
CR26
SCR 1 FBP-00-005
SILICON CONTROLLED RECTIFIER
L1
S3 45-66 CPS OPEN 320-480 CPS CLOSED INPUT FREQ. SWITCH
R36 1 20W
CR22
CR23
CR21
CR20
IN2155 (4)
R37 22K
C35 4MF 200V
C9 4MF 200V
C30 0.022 200V
C40 0.27MF 200V
C27
Q12 FBN-SP-787
EMITTER FOLLOWER/ REGULATOR
C29 .001MF ±20% 200V
R31 2K 2W WW
CR18 IN646
R33 100K
R32 100K
VOLTAGE REGULATED
CURRENT REGULATED
S1
I1 NE 81
LOAD FAULT ON
INDICATOR SELECTOR
Q9 FBN-CP-34634
CONTROLLED SWITCH
C8 10MF 150V
R20 220K
C44 470MMF 300V
R21 220
R81 10
C33 .22MF 35V
C5 .015MF 100V
Q10 FBN-2N1183
R30 100K
R29 18 1W
R23 25 3W
R22 100 5W
CR17
CR14
CR13
C7 1000MF 25V
R28 12K
R27 3.3K
CR15
CR11 IN936
CR12
F1 1 1/4A SLO-BLO
R26 82±1% 1/4 W
Q8 CURRENT REGULATOR
R25 390 2W WW
CR16
R24 50 4W
REFERENCE VOLTAGE SUPPLY
DC AMPLIFIER
Q5 FBN-CP-2293
Q7 FBN-CP-2357
2ND EMITTER FOLLOWER
C6 .0047MF 100V
R17 820
1 ST. EMITTER FOLLOWER
Q6 FBN-CP-2293
R9 2.2K
NOTE 13

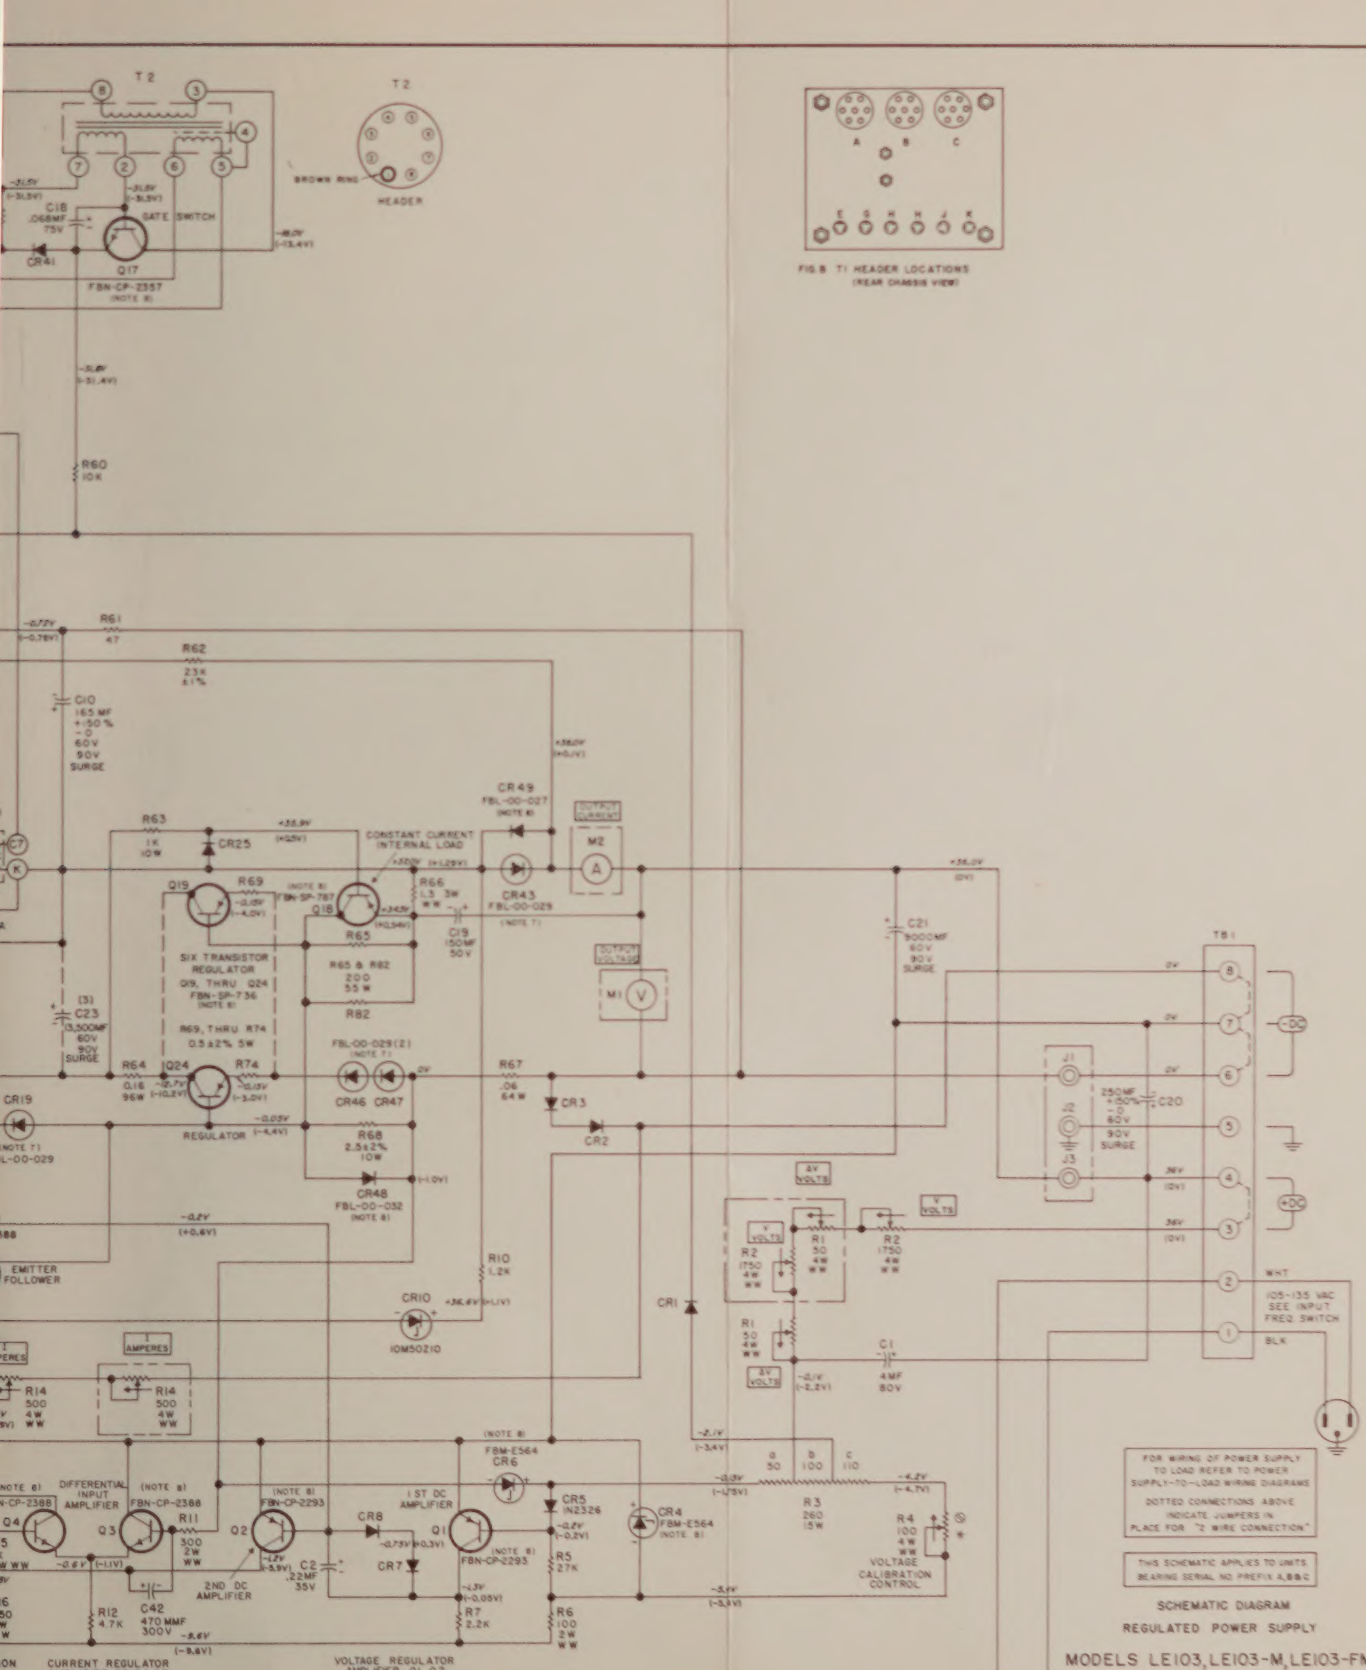

FIG.8 T1 HEADER LOCATIONS
(REAR CHASSIS VIEW)

SCHEMATIC DIAGRAM

REGULATED POWER SUPPLY

MODELS LE103, LE103-M, LE103-FM

FRONT PANEL CONTROLS AND
BINDING POSTS INCLUDED IN "FM" MODELS ONLY
METERS INCLUDED IN "M" & "FM" MODELS ONLY

LAMBDA
ELECTRONICS CORP.
MELVILLE, L.I., NEW YORK

5 - Year
Guarantee
We warrant each instrument manufactured by us, and sold by us or our authorized agents, to be free from defects in material and workmanship, and that it will perform within applicable specifications for a period of five years after original shipment. Our obligation under this guarantee is limited to repairing or replacing any instrument or part thereof, (except tubes and fuses) which shall, within five years after delivery to the original purchaser, be returned to us with transportation charges prepaid, prove after our examination to be thus defective.
We reserve the right to discontinue instruments without notice, and to make modifications in design at any time without incurring any obligation to make such modifications to instruments previously sold.

LAMBDA ELECTRONICS CORP.
515 BROADHOLLOW ROAD
MELVILLE, NEW YORK

MP MASTER
MA28328